


Betriebsanleitung
Operating Instructions
Instructions de service
Istruzioni d'uso
Handleiding
Instrucciones para el manejo
Manual de instruções
Naudojimosi instrukcija
Kasutusjuhend
Lietošanas instrukcija
Οδηγίες χρήσης
取扱説明書
사용설명서

Driftsinstruks
Driftsinstruktioner
Käyttöohje
Driftsvejledning
Instrukcja obsługi
Kezelési útmutató
Návod k obsluze
Navodilo za uporabo
Návod na obsluhu
EI Kitabi
Инструкция по эксплуатации
使用说明书

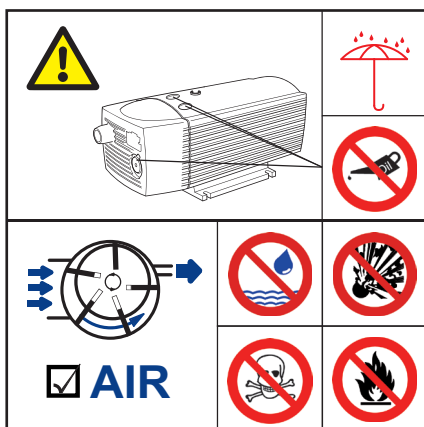

<p>MAX. VACUUM</p>	<p>type: _____ year: _____ frequency: _____ Hz speed: _____ rpm power required: _____ W inlet capacity: _____ m³/h max. vacuum: MAX. VACUUM mbar</p>																		
	<p>type: _____ year: _____ frequency: _____ Hz speed: _____ rpm power required: _____ W inlet capacity: _____ m³/h max. pressure: _____ mbar</p>																		
<p>INDEX</p>																			
	<table border="1"> <tr> <td></td> <td>50 Hz</td> <td>60 Hz</td> </tr> <tr> <td>DIN EN</td> <td>EVE-TR(-X) 10 60 dB(A)</td> <td>62 dB(A)</td> </tr> <tr> <td>ISO 2151</td> <td>EVE-TR(-X) 16 61 dB(A)</td> <td>64 dB(A)</td> </tr> <tr> <td>DIN EN</td> <td>EVE-TR(-X) 25 62 dB(A)</td> <td>67 dB(A)</td> </tr> <tr> <td>ISO 3744</td> <td>EVE-TR(-X) 40 67 dB(A)</td> <td>72 dB(A)</td> </tr> <tr> <td></td> <td>EVE-TR 50 67 dB(A)</td> <td>72 dB(A)</td> </tr> </table>		50 Hz	60 Hz	DIN EN	EVE-TR(-X) 10 60 dB(A)	62 dB(A)	ISO 2151	EVE-TR(-X) 16 61 dB(A)	64 dB(A)	DIN EN	EVE-TR(-X) 25 62 dB(A)	67 dB(A)	ISO 3744	EVE-TR(-X) 40 67 dB(A)	72 dB(A)		EVE-TR 50 67 dB(A)	72 dB(A)
	50 Hz	60 Hz																	
DIN EN	EVE-TR(-X) 10 60 dB(A)	62 dB(A)																	
ISO 2151	EVE-TR(-X) 16 61 dB(A)	64 dB(A)																	
DIN EN	EVE-TR(-X) 25 62 dB(A)	67 dB(A)																	
ISO 3744	EVE-TR(-X) 40 67 dB(A)	72 dB(A)																	
	EVE-TR 50 67 dB(A)	72 dB(A)																	

