

**Betriebsanleitung**  
**Operating Instructions**  
**Instructions de service**  
**Istruzioni d'uso**  
**Instrucciones para el manejo**

J. Schmalz GmbH  
Johannes-Schmalz-Str. 1  
D - 72293 Glatten  
schmalz@schmalz.de

**SERVICE**  
www.schmalz.com  
Sales and service network

**Type 1**  
1x filter EVE-KL-100-FU EVE-KL-150-FU

**Type 2**  
2x filter

**1** EVE-KL-300-FU

**2**

**AIR**

DIN EN ISO 11203 Accuracy Class 2 K <sub>PA</sub> = 3 dB(A) l <sub>PA</sub> = 1m	<b>EVE-KL-100-FU</b> ▶ 40 Hz, -400 mbar L <sub>PA</sub> = 70 dB(A)  <b>EVE-KL-150-FU</b> ▶ 40 Hz, -400 mbar L <sub>PA</sub> = 71 dB(A)  <b>EVE-KL-300-FU</b> ▶ 40 Hz, -400 mbar L <sub>PA</sub> = 74 dB(A)
----------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**3**

**4**

**INLET AIR**  
> 0°C/32°F < 40°C/104°F

Avoid condensation  
max. 90%

Please consult SCHMALZ

A > 100mm  
A > 4"

**5**

MIN 2m

EVE-KL-100-FU	178 kg 392 lbs
EVE-KL-150-FU	208 kg 459 lbs
EVE-KL-300-FU	340 kg 750 lbs

**6**

**7**

**VACUUM**

**AIR**  
> 100°C  
> 212°F

**8**

**9**

**Circuit breaker**  
EVE-KL-100/150-FU → C 16  
EVE-KL-300-FU → C 20

**9**

Input: .....V  
.....Hz  
Output: 3~.....Hz  
IP: ..CE  
Art.-Nr. VAU 4/4 .....

