

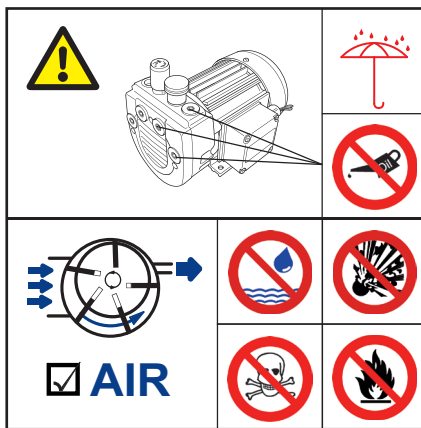
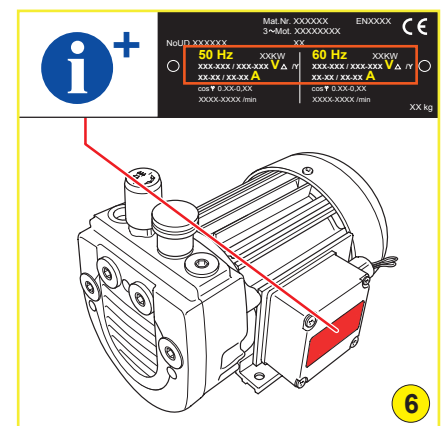
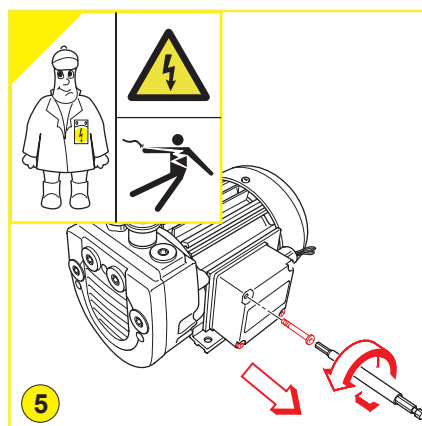
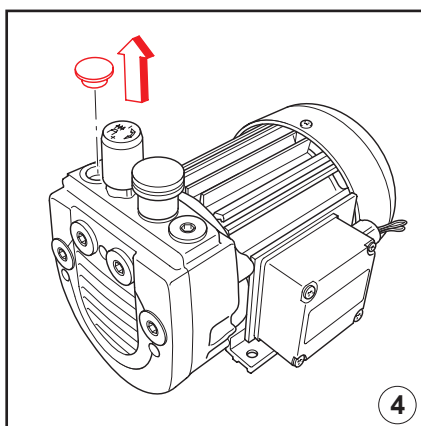
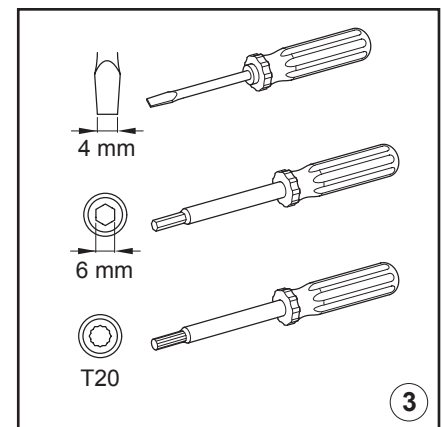
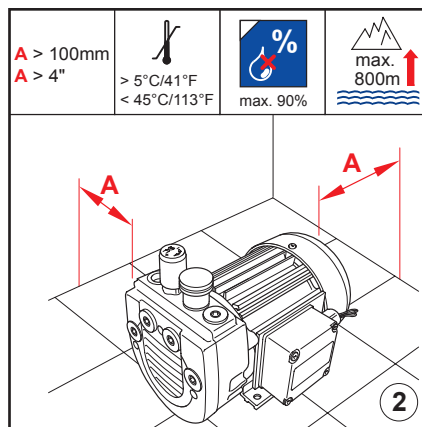


Betriebsanleitung
Operating Instructions
Instructions de service
Istruzioni d'uso
Handleiding
Instrucciones para el manejo
Manual de instruções
Naudojimosi instrukcija
Kasutusjuhend
Lietošanas instrukcija
Οδηγίες χρήσης
取扱説明書
사용설명서

Driftsinstruks
Driftsinstruktioner
Käyttöohje
Driftsvejledning
Instrukcja obsługi
Kezelési útmutató
Návod k obsluze
Navodilo za uporabo
Návod na obsluhu
EI Kitabi
Инструкция по эксплуатации
使用说明书

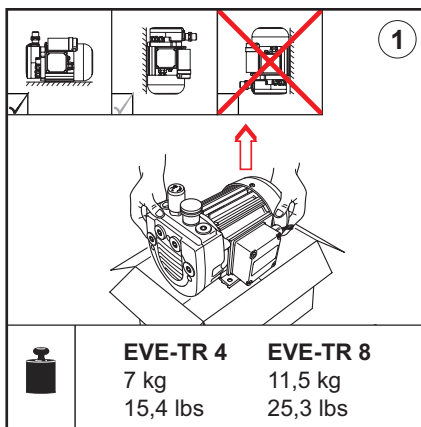

	MAX. VACUUM		mbar
	MAX.		m ³ /h
DIN EN ISO 3744	EVE-TR 4	50 Hz 59 dB(A) 60 Hz 61 dB(A)	
	EVE-TR 8	58 dB(A) 61 dB(A)	

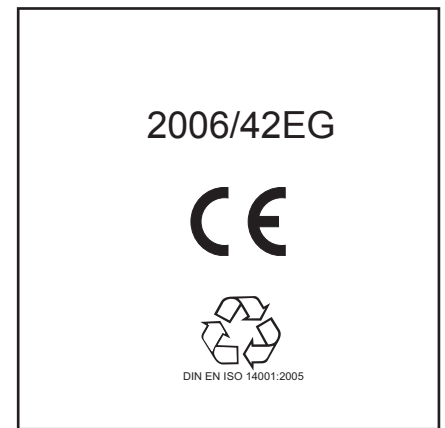

EVE-TR 4 – 8 AC/AC3

BA 30.30.01.00780

Status 10.2017
Index 01

J. Schmalz GmbH
Johannes-Schmalz-Str. 1
D - 72293 Glatten
Tel +49 +7443 / 2403 - 0
Fax +49 +7443 / 2403 - 259
http://www.schmalz.com
e-mail: schmalz@schmalz.de

