

# Operating Instructions Schmalz Blower SB-L-EX

30.30.01.03368

Seite / Page 1/1

Status 11.2022  
Index 02

J. Schmalz GmbH  
Johannes-Schmalz-Str. 1  
D - 72293 Glatten  
Tel +49 +7443 / 2403 - 0  
Fax +49 +7443 / 2403 - 259  
http://www.schmalz.com  
e-mail: schmalz@schmalz.de



**Betriebsanleitung**  
**Operating Instructions**  
**Instructions de service**  
**Istruzioni d'uso**  
**Handleiding**  
**Instrucciones para el manejo**  
**Manual de instruções**  
**Naudojimosi instrukcija**  
**Kasutusjuhend**  
**Lietošanas instrukcija**  
**Οδηγίες χρήσης**  
**取扱説明書**  
**사용설명서**

**Driftsinstruks**  
**Driftsinstruktioner**  
**Käyttöohje**  
**Driftsvejledning**  
**Instrukcja obsługi**  
**Kezelési útmutató**  
**Návod k obsluze**  
**Navodilo za uporabo**  
**Návod na obsluhu**  
**Ei Kitabi**  
**Инструкция по эксплуатации**  
**使用说明书**

	<p>MAX. VACUUM</p> <p>CE type No year</p> <p>frequency Hz</p> <p>speed min</p> <p>power required kW</p> <p>inlet capacity m³/h</p> <p>max vacuum mbar</p>
	<p>MAX.</p> <p>CE type No year</p> <p>frequency Hz</p> <p>speed min</p> <p>power required kW</p> <p>inlet capacity m³/h</p> <p>max vacuum mbar</p>
<p>DIN EN ISO 11203 Accuracy Class 2 K<sub>pA</sub> = 3 dB(A) l<sub>pA</sub> = 73/76 dB(A) l<sub>pA</sub> -1m</p> <p>Schmalz Blower SB-L EX ▶ 50/60 Hz, -280/-295 mbar L<sub>pA</sub> = 73/76 dB(A)</p>	

